

FusionLite Massage Chair



© Copyright 2019
Living Earth Crafts®

All rights reserved. This document or any portion thereof may not be reproduced in any way, including photocopying or translation to another language without the prior written permission from Living Earth Crafts.

Living Earth Crafts® is a registered trademark of Earthlite, LLC.

Legal Notice

The information provided in this document is intended for informational purposes only and is subject to change without notice. The information provided in this document should not be construed as a commitment by Living Earth Crafts®.

Living Earth Crafts® assumes no responsibility for the accuracy or suitability of the information contained in this document. This document may contain technical inaccuracies or errors. Living Earth Crafts® makes no expressed or implied warranties of any kind concerning the information contained in this document, including, but not limited to, the implied warranties of merchantability and fitness for purpose.

Living Earth Crafts® shall not be liable for incidental or consequential damages in connection with or arising out of the product, performance, or use of this document and the information and material it describes.

Introduction

Congratulations on your purchase of the FusionLite stationary massage chair. The FusionLite makes a quantum leap in the chair massage experience, incorporating the latest in meditative nature journeys, LED Chroma lighting, and electronic adjustability to dramatically intensify the relaxation experience.

FusionLite chairs are designed for licensed therapists and are intended to be used in a professional spa, massage studio, or similar commercial environment. While no special training is needed to operate the chair, for safety reasons it is important that the instructions contained in this manual are reviewed in detail before the first use. This manual should be read in its entirety by each professional who will be operating the chair to ensure the safety of both operator and client. This manual should be saved for future reference.

The FusionLite chair should not be used in any other manner than described in this manual. Please read, understand, and follow all safety warnings, labels, and instructions. Misuse, use of unnecessary force, or using the chair for unintended or unauthorized procedures can result in injury to operator, client, and/or equipment.

Detailed instructions for use and maintenance can be found in this user manual. If you have further questions, please contact us at (800) 872-0560 for US customers, or (760) 597-2155 for international customers. We can also be reached via e-mail at info@livingearthcrafts.com

Table of Contents

Section 1: Safety Information	
Safety Symbols.....	2
Warnings & Grounding Instructions	2-3
Section 2: Product Overview	
Product Diagram	4-5
Product Specifications	4-5
Section 3: Installation	
Moving Your Table	6
Basic Setup	6
Leveling Instructions	6
Section 4: Operating Instructions	
Main Hand Control.....	7
Manual Adjustments	8
LED Lighting Controls	9
Electrical Specifications	9
Section 5: Care & Maintenance	
Care Instructions	10
Troubleshooting	11-12
Warranty Information	12
Contact Us	back cover

SECTION 1: SAFETY INFORMATION

Safety Symbols

Familiarize yourself with the following Safety & Warning symbols. They are designed to prevent damage and injury to you, your clients, and your new Living Earth Crafts product.

IMPORTANT: The important safety instructions and warnings in this manual cannot cover all possible problems and conditions that can occur. Use common sense and caution when installing, operating, or maintaining this appliance.



Indicates an imminently hazardous situation which could result in serious or fatal injury.



Indicates a potentially hazardous situation which could result in serious injury.



Indicates a potentially hazardous situation which could result in equipment damage and/or injury.

IMPORTANT SAFETY INSTRUCTIONS - FOR COMMERCIAL USE ONLY

Read all instructions before using this product.




RISK OF ELECTRIC SHOCK, FIRE, AND EXPLOSION

- 1) Always unplug this furnishing from the electrical outlet before servicing.
- 2) Never use this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- 3) Keep the cord away from heated surfaces.
- 4) Do not use outdoors.
- 5) Do not operate where aerosol (spray) projects are being used or where oxygen is being administered.
- 6) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 7) Connect this furnishing to a properly grounded outlet only. See Grounding Instructions.

GROUNDING INSTRUCTIONS:

POWER SUPPLY: (120V AC grounded) Electrical limitations: Do not use extension cord with this product, plug directly into grounded outlet. This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. This three prong grounded plug will only fit into wall outlet one way. If the plug does not fit fully in the outlet, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

NORTH AMERICA ONLY

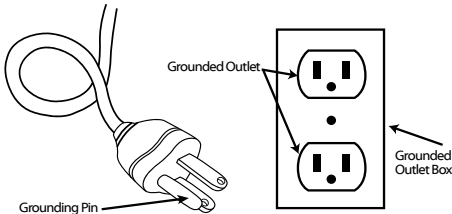

INTERNATIONAL VERSIONS ONLY

This product is for use on a nominal 220V-240V circuit and has a grounding plug (plug type varies by country). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

SECTION 1: SAFETY INFORMATION

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:



- 1) Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 2) Do not operate this equipment unless properly trained.
- 3) Install this furnishing in treatment area not accessible to the public.
- 4) Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- 5) This product does not have "pinch point" protection. Only operate when no possibility of any portion of the body could be caught and injured while moving the table top upward/downward, or activating the back/foot tilt.
- 6) Do not use this furnishing to support video equipment such as televisions or computer monitors.
- 7) Never attempt to use the armrest section to support concentrated weight such as sitting or standing

CAUTION

1) When lowering any section of the table, make sure that no supplies or any part of yours or your client's body is between the top of your table and its base. This could result in injury, or could damage your table as well as the item. It is recommended that you always return your table top to the lowest flat position to avoid leaving the base exposed.

- 2) When lowering any part of your chair, be sure there are no foreign obstacles underneath that could obstruct it from lowering completely. This could damage your chair.
- 3) Never operate your chair on an uneven surface. Adjust the leveling feet so that your chair is stable.
- 4) Never use or store your chair in a wet or very humid environment. Water and excessive moisture can damage the wood and electrical components. Evidence of exposure to water or moisture will void your warranty.
- 5) Never drop or insert any object into any opening.

SECTION 2: PRODUCT OVERVIEW

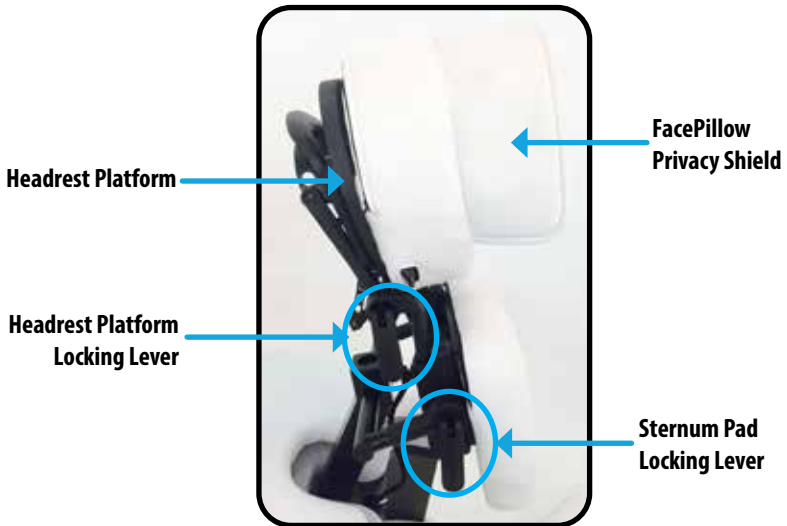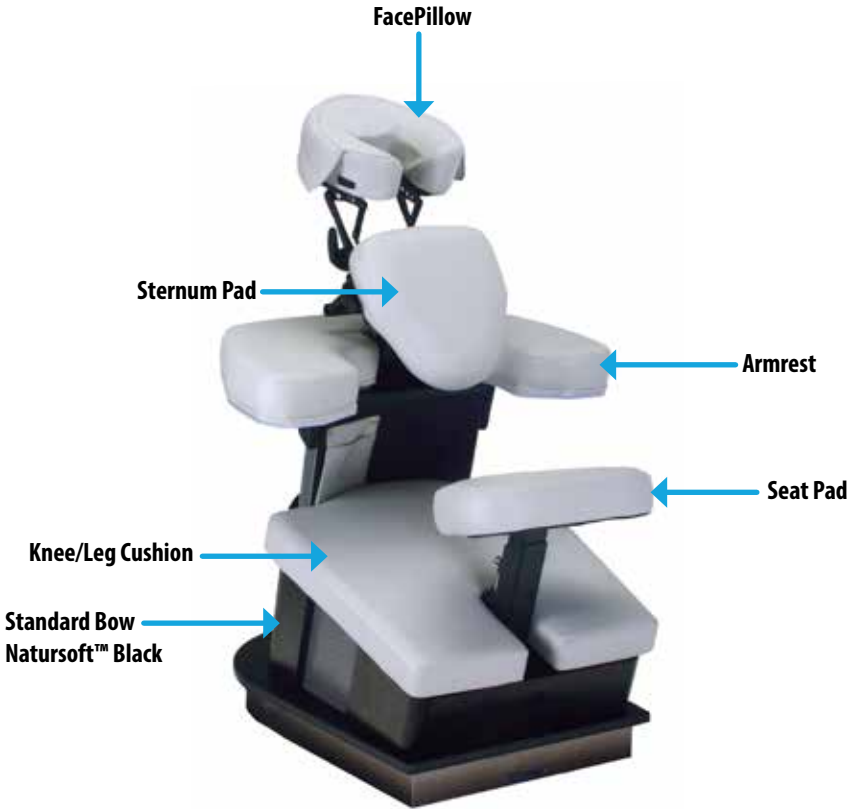

**Chair shown with optional accessories and finishes*

SECTION 2: PRODUCT OVERVIEW

Product Specifications

Base Size	22" W x 34" D (55.8cm W x 86.3cm D)
Armrest Size	31" W x 22" D (78cm W x 55.9cm D)
Seat Pad Size	15" W x 13" D (38cm W x 33cm D)
Seat Pad Height Adjustment	4" (10.2cm)
Chest Pad Size	12" W x 12" L (30.5cm W x 30.5cm D)
Chest Pad Height Adjustment	4" (10.2cm)
Chest Pad Degree of Tilt	0 - 90 degrees
Headrest Degree of Tilt	0 - 90 degrees
Weight Capacity	500 lbs
Cushioning	3" Strata™ Memory Foam System

**Measurements may vary due to natural material variations.*

Included Features

Feature	Standard	Optional
LED Chroma Lighting	X	
Zenvi Sound Cushion	X	
Aromatherapy Well	X	
Powered Seat/Chest Adjustment	X	
USB Port	X	
Digital Heated Seat		X
Tablet w/Nature Themed Meditation Videos		X
Upholstery	Natursoft™	UltraLeather®

SECTION 3: INSTALLATION

Moving Your FusionLite



Your FusionLite chair is very heavy - extreme caution should be used to avoid injury to yourself, others around you, and your table. DO NOT lift or move without using proper safety procedures/equipment. DO NOT turn the chair on its side for any reason.

- It is recommended to use 2 people to move your FusionLite chair.
- To avoid damage to your FusionLite chair, it is very important that it only be lifted from certain positions (marked with **BLUE** circles below).
- DO NOT try to lift from the headrest, sternum pad, or seat pad.






Leveling Your Chair

Leveling, or balancing, your chair is very important during initial setup and routine maintenance.

To adjust the leveler feet (2 people needed):

1. Place the chair in the position you plan to use it.
2. To determine which foot needs adjusting, attempt to “rock” your chair. If there is any movement, the foot that is lifting is the one that will need adjusting.
3. Person 1: Carefully tilt the chair slightly to access the leveling foot you need to adjust.
4. Person 2: Using your hand, or a wrench if necessary, turn the leveling foot in the needed direction. (Counterclockwise will lower the overall height, clockwise will raise the overall height)

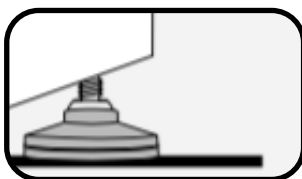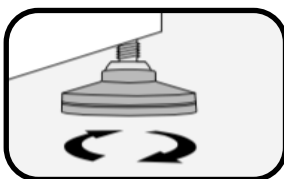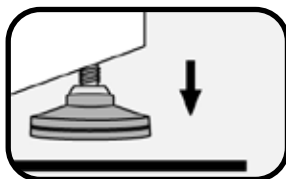

Basic Setup Instructions


Once your FusionLite chair is positioned for use and leveled, follow these steps:

- Plug the power cord into a grounded outlet that is properly rated for the furnishing.
- Arrange and secure the power cord so it will not create a tripping hazard.
- Place the hand control where it will be safe and accessible.
- Ensure the control is not in danger of being crushed by the lift mechanisms.
- Turn the master switch to the “On” position.

SECTION 4: OPERATING INSTRUCTIONS

Main Hand Control Operation

Your FusionLite hand control is already connected and ready for use. See below for descriptions of each button functionality, including 3 programmable memory positions.

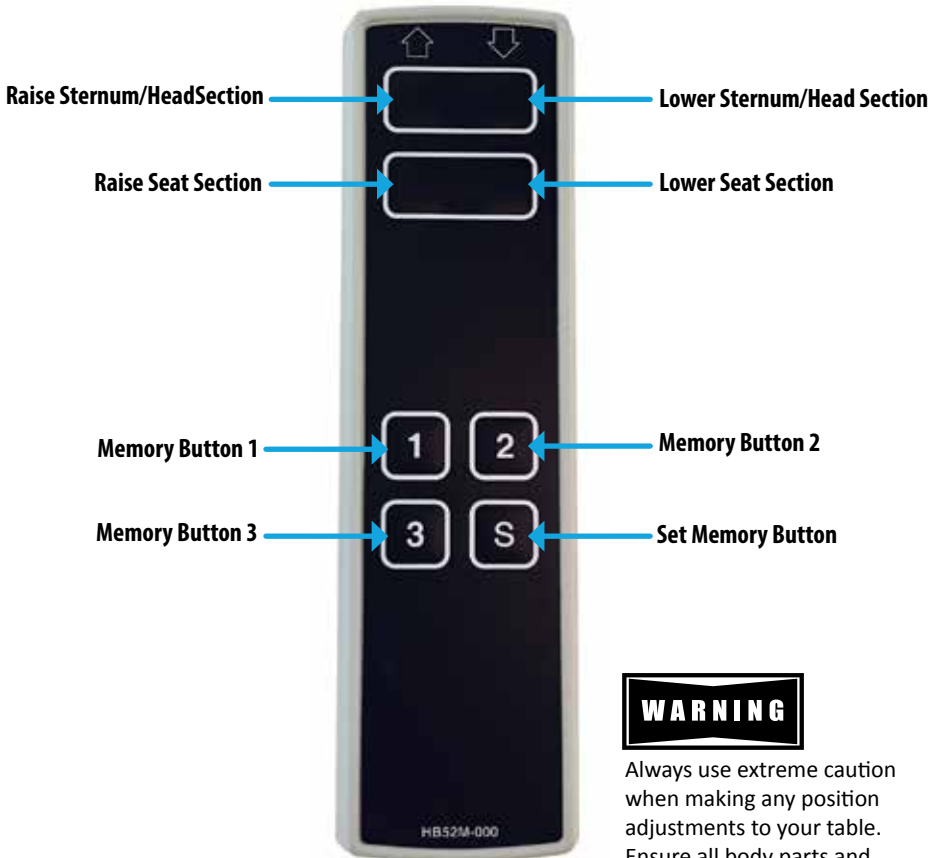

Always use extreme caution when making any position adjustments to your table. Ensure all body parts and objects are clear from all moving parts.

Setting Memory Positions

Your FusionLite chair has the ability to store your favorite chest/seat positions so you can conveniently return to them at any time. Follow the instructions below to set memory positions.

1. Using the top 4 buttons, set your FusionLite chair to the desired position.
2. Press and hold the “S” button for 5 seconds.
3. Press the memory button you would like to store the position under (1, 2, or 3).
4. The position has now been stored. Press and hold the memory button you stored the position under (1, 2, or 3) to return to the stored position at any time.
5. Repeat this process for the remaining memory buttons.

Note: You can overwrite previously stored memory positions using the same steps.

SECTION 4: OPERATING INSTRUCTIONS

Manual Adjustments

In addition to the powered height adjustments, you can make manual adjustments to the tilt of the headrest platform and sternum pad.

Headrest Tilt



Loosen the headrest locking lever by pulling it towards you.



The headrest tilt can now be freely adjusted.



Lock the lever by pushing it in towards the chair.

Sternum Pad Tilt



Loosen the sternum locking lever by pulling it towards you.



The sternum pad tilt can now be freely adjusted.




Lock the lever by pushing it in towards the chair.

SECTION 4: OPERATING INSTRUCTIONS

LED Chroma Lighting Hand Control Operation

Note: The receiver for this wireless control is located next to the master switch. Ensure you point at the receiver when using this control.

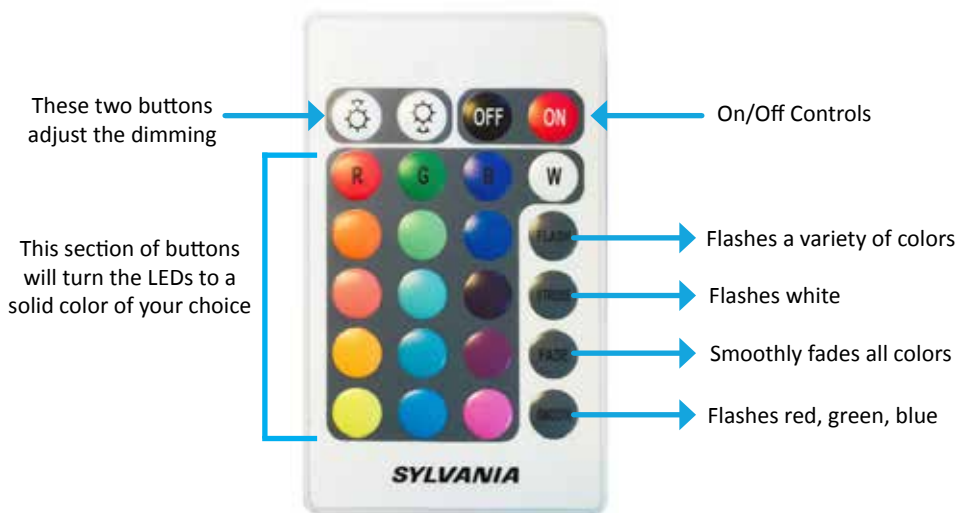

Electrical Specifications

Input Voltage	120 VAC	220 VAC
Input Frequency	60 Hz	50 Hz
Consumption	8 Amps Max, 960 Watts	4.4 Amps Max, 960 Watts
Output	12-24 VDC	12-24 VDC
Duty Cycle	10%, 2 min/18 min	10%, 2 min/18 min

SECTION 5: CARE & MAINTENANCE

Cleaning & Ongoing Maintenance



RISK OF ELECTRIC SHOCK

Always unplug this furnishing from the electrical outlet before cleaning.



DO NOT USE acetone, "Armor All" type cleaners, citrus-based cleaners, or industrial cleaners. These can seriously damage the upholstery. Such damage would not be covered under warranty.

Your FusionLite chair is relatively maintenance free. However, to ensure your chair will continue to function properly and keep its appearance, we recommend the following.

Category	Care Recommendation
Upholstery	<p>Remove day-to-day dirt and smudges with a mild soap and water solution. For tough stains and to disinfect, use a (100 to 1) water to bleach solution. Spray a damp cloth with the solution to clean.</p> <p>After each cleaning, gently wipe the upholstery with a damp cloth and clean water, then allow upholstery to air dry before using or storing.</p> <p>For more difficult stains, please contact your dealer or please call us directly for guidance. For best results, use only the products suggested above.</p>
Laminate	<p>Never use abrasive cleaners. A mild liquid detergent and warm water will clean soiled surfaces. To avoid discoloration, cleaners containing petroleum distillates must not remain on surfaces.</p>
Wood	<p>To maintain the wood finish and retouch scratches, use a high quality furniture wax.</p>
Electronics	<p>Anti-static electronic aerosol dusters can be used to keep the surfaces of electronic components, power cables, and plugs free of dust.</p>
Lubrication & Mechanical	<p>If necessary, lubricate wheel joints, casters, foot glide levelers, ball joints, and other mechanical parts with a light machine oil. Periodically check and ensure all visible bolts remain tightened.</p>
Leveling Feet	<p>Regularly check to ensure the chair is level and stable. See page 6 for leveling instructions.</p>

SECTION 5: CARE & MAINTENANCE

Troubleshooting

This helpful troubleshooting guide will provide you with information about how to recognize a problem with your product, determine possible causes, and find a solution.

In the event your specific situation is not covered in this guide, please contact Living Earth Crafts so our technical support department can assist you. Beyond the troubleshooting guide below, do not attempt to repair the table yourself. This can void your warranty.

Unauthorized service will not be covered. Please be sure to contact Living Earth Crafts Customer Service first at (800) 358-8292, (760) 597-2155 Int'l.

Issue	Solution
Nothing on chair is turning on or working	<ol style="list-style-type: none">1. Ensure the chair is plugged into a grounded and dedicated outlet.2. If using a dimmer switch, ensure it is turned to full power.3. Ensure the outlet in your room is receiving power. This can be done by plugging in a small appliance and turning it on.4. Check the fuse or circuit breaker for blown fuse or tripped breaker.5. Ensure the controls are securely plugged into the junction box (Junction box is located under the knee/leg cushion - see page 12 for instructions on how to remove cushion.)
Table does not operate in accordance with hand control	<ol style="list-style-type: none">1. Ensure the controls are securely plugged into the junction box. (Junction box is located under the knee/leg cushion - see page 12 for instructions on how to remove cushion.)
LED Lights are not working	<ol style="list-style-type: none">1. Follow steps above to ensure chair is receiving power.2. Ensure the remote control is pointing directly at the receiver, located next to the master switch.3. Ensure all lighting cables are properly engaged at 3-way connector and individual connectors. (Connectors are located under the knee/leg cushion - see page 12 for instructions on how to remove cushion.)
LED lights show only one color	<ol style="list-style-type: none">1. Ensure all lighting cables are properly engaged at 3-way connector. Each prong is responsible for a designated color. (Connectors are located under the knee/leg cushion - see page 12 for instructions on how to remove cushion.)


SECTION 5: CARE & MAINTENANCE

Troubleshooting - Accessing Electrical

To access electrical for troubleshooting purposes, follow the steps below to remove the cushion.



1. Lift the cushion from the highlighted sections (they are secured with velcro).

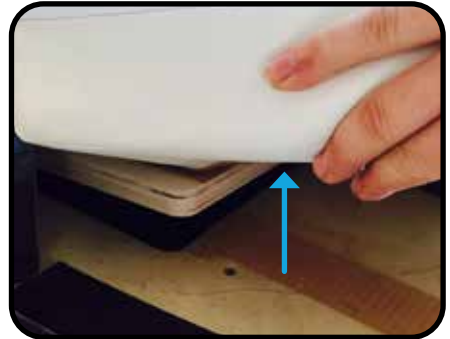

2. Continue lifting - there is a wood panel that will loosen and lift out of place.

Warranty Information

Living Earth Crafts (LEC) offers an industry best warranty against defects in materials, design, and workmanship, to the original owner, as follows:

- Frame - lifetime warranty*
- Foam and upholstery covering - warranted for three (3) years
- Motors, controls, electronics - warranted for two (2) years, including parts and labor
- Accessories and options - warranted for one (1) year, unless otherwise noted

LEC may repair or replace defective components at our discretion. LEC will return the warranted product, standard shipping pre-paid, to customers in the continental US. International customers are responsible for any applicable duties and taxes, as well as all shipping charges inbound and outbound. Normal wear and tear, and costs associated with maintenance procedures, and damage caused by accident, misuse, improper maintenance, harsh operating environments or neglect (which includes tears in the upholstery and damage caused by harsh chemical-based cleaners) are not covered under this warranty. All warranties are limited to repair or replacement, at LEC's discretion, unless otherwise stated.

*Lifetime warranty applies to the original owner, as long as you own your table for 5 years after the model is discontinued, or 5 years for private label tables.



Contact Us

Living Earth Crafts
990 Joshua Way
Vista, CA. 92081
(800) 358-8292
(760) 597-2155 Int'l
(866) 449-8872 fax
info@livingearthcrafts.com

Hours of operation:
Monday - Friday
8:00 a.m. to 5 p.m. PST
Saturday - Sunday
Closed

Visit us online at: livingearthcrafts.com



Join us on
Facebook



Follow us on
Twitter



Follow us on
Instagram



Connect with us
on Linked In